Assembly Instructions
Daisy field Complete Pendant # PXS414

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

1. Thread two screws through the mounting strap, then secure them with two lock nuts. Adjust the length of the screws if necessary.
2. Attach the mounting strap to the outlet box by using two mounting screws.
3. Choose the length of the chain you need, then spread one end link of the chain to clamp securely to the loop.
4. Weave the cord and fixture grounding wire through the chain and the canopy.
5. Clamp the other end link of the chain to the top loop.
6. Measure about 8" of the cord (A) from the top of the canopy, then cut off the unnecessary cord. (See Fig.1)
7. Slit the cord apart into two wires (C), about 4" from the top of the cord. Then use a knife to peel off the insulation of the two wires at about 5/8" length(B) from the top of the wires to expose the copper for wiring. (See Fig.1)
8. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections with wire nuts:
   ---The smooth wire (marked) from the fixture to the black wire from the power source.
   ---The ridged wire (unmarked) from the fixture to the white wire from the power source.
   ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.
   Carefully put the wires back into the outlet box.
9. Attach the canopy to the mounting strap by inserting the screws, then secure it with the bolt nuts.
10. Attach the shade to the socket, and then secure it with socket ring.
11. Install a bulb (not included). Note relamping label at socket or packaging area for maximum allowed wattage.
12. Turn on the power at the main fuse or circuit breaker box.

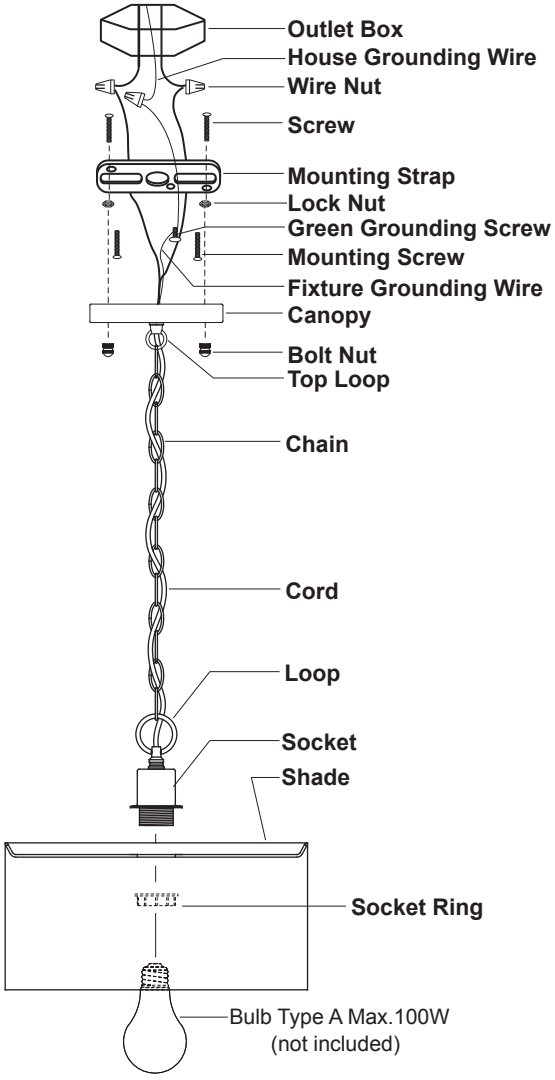

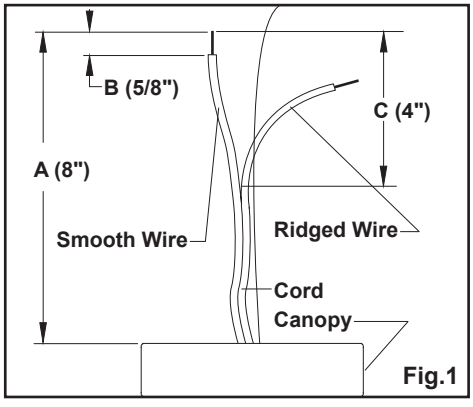

Fig.1